

Thank you for your purchase!

Note: In order to achieve a spark, you must scrape the black paint from the ferro rod.

TO ADJUST YOUR BRACELET: There is one cord on both sides of the weave that will make the loop smaller or bigger on each side of the weave. (Shaded area in Figure 4) This will adjust the size of your bracelet.

Note: Do not pull too far. This will start to undo the weave on your bracelet.

TO DEPLOY YOUR BRACELET:

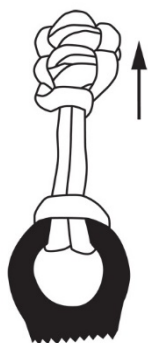


Figure 1

Step 1. Start by moving the weave towards the end with the ferro rod until you have a tighter weave and extra room at the other end with the scraper (Figure 1).

Step 2. Take the loop and pull it over the top of the scraper (Figure 2). You may now pull the loop thru the scraper so you are left with just a loop. (Figure 3)



Figure 2



Figure 3

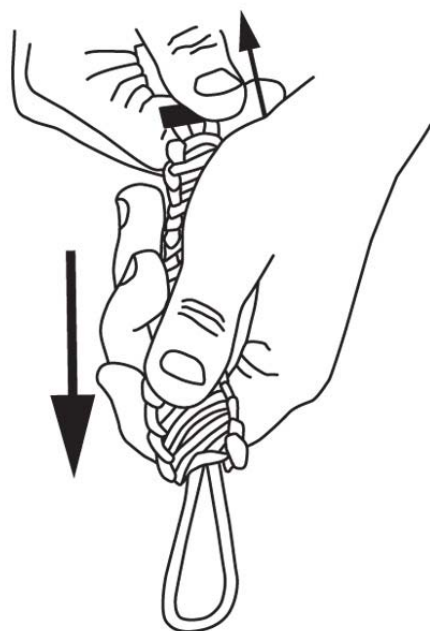


Figure 5

Step 3. Pull the adjustment loop cord (with the ferro rod) until the upper adjustment loop disappears under the weave. Pull the other cord next to ferro rod while holding the weave with your other hand and pull in opposite directions (Figure 5). This pulls the loop through the weave, freeing the paracord.

For questions or comments email:
theSOSbracelet@gmail.com

Scan the QR code to check out our YouTube channels **tips and tricks**.

Or visit www.BeRescued.net and check out the blog for great survival information.



Figure 4